

JAGUAR X350

1 : General Information

100 : Service Information

100-00 : General Information

Description and Operation

[About This Manual](#)

[Application and Use of Specifications](#)

[General Service Information](#)

[Health and Safety Precautions](#)

[How To Use This Manual](#)

[Important Safety Instructions](#)

[Road/Roller Testing](#)

[Solvents, Sealants and Adhesives](#)

[Standard Workshop Practices](#)

100-01 : Identification Codes

Description and Operation

[Identification Codes - VIN Range: G00442->G45703](#)

[Identification Codes - VIN Range: G45704->G99999](#)

100-02 : Jacking and Lifting

Description and Operation

[Jacking](#)

[Lifting](#)

100-04 : Noise, Vibration and Harshness

General Procedures

[Exhaust System Neutralizing](#)

Description and Operation

[Noise, Vibration and Harshness \(NVH\)](#)

Diagnosis and Testing

[Noise, Vibration and Harshness \(NVH\)](#)

2 : Chassis

204 : Suspension

204-00 : Suspension System - General Information

Specifications

[Specifications](#)

General Procedures

[Camber and Caster Adjustment](#)

[Front Toe Adjustment \(57.65.01\)](#)

[Rear Toe Adjustment \(57.65.08\)](#)

[Wheel Bearing Inspection](#)

Description and Operation

[Wheel Alignment Angles](#)

Diagnosis and Testing

[Suspension System](#)

204-01 : Front Suspension

Specifications

[Specifications](#)

Description and Operation

[Front Suspension](#)

Diagnosis and Testing

[Front Suspension](#)

Removal and Installation

[Front Lower Arm \(60.35.53\)](#)

[Rear Lower Arm \(60.35.54\)](#)

[Rear Lower Arm Bushing \(60.35.56\)](#)

[Shock Absorber Bushing \(60.30.16\)](#)

[Front Stabilizer Bar - 3.0L NA V6 - AJ27 \(60.10.01\)](#)

[Front Stabilizer Bar - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8 \(60.10.01\)](#)

[Front Stabilizer Bar - 2.7L V6 - TdV6 \(60.10.01\)](#)

[Front Stabilizer Bar Link \(60.10.02\)](#)

[Stabilizer Bar Link Bushing \(60.10.03\)](#)

[Upper Arm LH \(60.35.41\)](#)

[Upper Arm RH \(60.35.42\)](#)

[Front Wheel Bearing and Wheel Hub \(60.25.03\)](#)

[Wheel Knuckle \(60.25.23\)](#)

204-02 : Rear Suspension

Specifications

[Specifications](#)

Description and Operation

[Rear Suspension](#)

Diagnosis and Testing

[Rear Suspension](#)

Removal and Installation

[Lower Arm \(64.35.43\)](#)

[Rear Stabilizer Bar \(64.35.08\)](#)

[Rear Stabilizer Bar Link \(64.35.24\)](#)

[Upper Arm \(64.25.31\)](#)

[Rear Wheel Bearing \(64.15.14\)](#)

204-04 : Wheels and Tires

[Specifications](#)

[Description and Operation](#)

[Wheels and Tires - VIN Range: G00442->G45703](#)

[Wheels and Tires - VIN Range: G45704->H18679](#)

[Wheels and Tires - VIN Range: H18680->H99999](#)

[Diagnosis and Testing](#)

[Wheels and Tires - VIN Range: G00442->G45703](#)

[Wheels and Tires - VIN Range: G45704->G99999](#)

[Removal and Installation](#)

[Tire Low Pressure Sensor](#)

[Tire Pressure Monitoring System \(TPMS\) Front Antenna](#)

[Tire Pressure Monitoring System \(TPMS\) Module](#)

[Tire Pressure Monitoring System \(TPMS\) Rear Antenna](#)

[Wheel and Tire \(74.20.05\)](#)

204-05 : Vehicle Dynamic Suspension

[Specifications](#)

[Specifications](#)

[General Procedures](#)

[Air Leaks](#)

[Ride Height Adjustments](#)

[Description and Operation](#)

[Vehicle Dynamic Suspension](#)

[Diagnosis and Testing](#)

[Vehicle Dynamic Suspension](#)

[Removal and Installation](#)

[Air Suspension Compressor](#)

[Air Suspension Control Module \(60.32.03\)](#)

[Air Suspension Reservoir](#)

[Air Suspension Solenoid Valve Block](#)

[Front Air Spring \(60.32.08\)](#)

[Front Vertical Accelerometer \(86.56.53\)](#)

[Rear Air Spring - VIN Range: G00442->G45703 \(60.32.10\)](#)

[Rear Air Spring - VIN Range: G45704->G99999 \(60.32.10\)](#)

[Rear Air Spring Lower Bushing \(64.32.03\)](#)

[Rear Vertical Accelerometer \(86.56.55\)](#)

[Suspension Height Sensor \(60.32.05\)](#)

205 : Driveline

205-00 : Driveline System - General Information

General Procedures

[Driveline Angle Inspection](#)

Description and Operation

[Driveline System](#)

Diagnosis and Testing

[Driveline System](#)

205-01 : Driveshaft

Specifications

[Specifications](#)

General Procedures

[Driveshaft Runout and Balancing](#)

Description and Operation

[Driveshaft](#)

Diagnosis and Testing

[Driveshaft](#)

Removal and Installation

[Driveshaft \(47.15.01\)](#)

205-02 : Rear Drive Axle/Differential

Specifications

[Specifications](#)

Description and Operation

[Rear Drive Axle and Differential](#)

Diagnosis and Testing

[Rear Drive Axle and Differential](#)

Removal and Installation

[Axle Assembly - Vehicles Without: Differential Drain Plug \(51.25.13\)](#)

[Axle Assembly - Vehicles With: Differential Drain Plug \(51.25.13\)](#)

[Axle Housing Bushing \(64.25.30\)](#)

In Vehicle Repair

[Drive Pinion Seal \(51.20.01\)](#)

205-05 : Rear Drive Halfshafts

Specifications

[Specifications](#)

Description and Operation

[Rear Drive Halfshafts](#)

Diagnosis and Testing

[Rear Drive Halfshafts](#)

Removal and Installation

[Rear Halfshaft \(47.10.13\)](#)

[Inner Constant Velocity \(CV\) Joint Boot \(47.10.33\)](#)

[Outer Constant Velocity \(CV\) Joint Boot \(47.10.32\)](#)

206 : Brake System

206-00 : Brake System - General Information

Specifications

Specifications

Specifications

General Procedures

Brake Disc Runout Check

Brake System Bleeding - VIN Range: G00442->G45703 (70.25.03)

Brake System Bleeding - VIN Range: G45704->H99999 (70.25.03)

Description and Operation

Brake System - VIN Range: G00442->G45703

Brake System - VIN Range: G45704->G99999

Diagnosis and Testing

Brake System

206-03 : Front Disc Brake

Specifications

Specifications

Specifications

Description and Operation

Front Disc Brake - VIN Range: G00442->G45703

Front Disc Brake - VIN Range: G45704->G99999

Front Disc Brake

Diagnosis and Testing

Front Disc Brake

Removal and Installation

Brake Caliper - Vehicles With: Standard Brakes, VIN Range: G00442->G45703 (70.55.02)

Brake Caliper - Vehicles With: Standard Brakes, VIN Range: G45704->G99999 (70.55.02)

Brake Caliper - Vehicles With: High Performance Brakes, VIN Range: G00442->G45704 (70.55.02)

Brake Caliper - Vehicles With: High Performance Brakes, VIN Range: G45704->G99999 (70.55.02)

Brake Disc - Vehicles With: Standard Brakes, VIN Range: G00442->G45703 (70.10.10)

Brake Disc - Vehicles With: Standard Brakes, VIN Range: G45704->G99999 (70.10.10)

Brake Disc - Vehicles With: High Performance Brakes, VIN Range: G00442->G45703 (70.10.10)

Brake Disc - Vehicles With: High Performance Brakes, VIN Range: G45704->G99999 (70.10.10)

Brake Disc Shield - Vehicles With: Standard Brakes (70.10.18)

Brake Disc Shield - Vehicles With: High Performance Brakes (70.10.18)

Brake Pads - Vehicles With: Standard Brakes, VIN Range: G00442->G45703 (70.40.02)

Brake Pads - Vehicles With: Standard Brakes, VIN Range: G45704->G99999 (70.40.02)

Brake Pads - Vehicles With: High Performance Brakes, VIN Range: G00442->G45703 (70.40.02)

Brake Pads - Vehicles With: High Performance Brakes, VIN Range: G45704->G99999 (70.40.02)

206-04 : Rear Disc Brake

Specifications

Specifications

Specifications

Description and Operation

Rear Disc Brake - VIN Range: G00442->G45703

Rear Disc Brake - VIN Range: G45704->G99999

Rear Disc Brake

Diagnosis and Testing

Rear Disc Brake

Removal and Installation

Brake Caliper - Vehicles With: Standard Brakes, VIN Range: G00442->G45703 (70.55.03)

Brake Caliper - Vehicles With: High Performance Brakes, VIN Range: G00442->G45703 (70.55.03)

Brake Caliper - VIN Range: G45704->G99999 (70.55.03)

Brake Disc - Vehicles With: Standard Brakes, VIN Range: G00442->G45703 (70.10.11)

Brake Disc - Vehicles With: High Performance Brakes, VIN Range: G00442->G45703 (70.10.11)

Brake Disc - VIN Range: G45704->G99999 (70.10.11)

Brake Disc Shield (70.10.19)

Brake Pads - Vehicles With: Standard Brakes, VIN Range: G00442->G45703 (70.40.03)

Brake Pads - Vehicles With: High Performance Brakes, VIN Range: G00442->G45703 (70.40.03)

Brake Pads - VIN Range: G45704->G99999 (70.40.03)

206-05 : Parking Brake and Actuation

Specifications

Specifications

Specifications

General Procedures

Parking Brake Cable Tension Release - VIN Range: G00442->G45703

Parking Brake Cable Tension Release - VIN Range: G45704->G99999

Description and Operation

Parking Brake - VIN Range: G00442->G45703

Parking Brake - VIN Range: G45704->G99999

Diagnosis and Testing

Parking Brake - VIN Range: G00442->G45170

Parking Brake - VIN Range: G45171->G99999

Removal and Installation

[Parking Brake Module - VIN Range: G00442->G45703 \(70.35.47\)](#)

[Parking Brake Module - VIN Range: G45704->G99999 \(70.35.47\)](#)

[Parking Brake Pads - Vehicles With: High Performance Brakes \(70.40.04\)](#)

[Parking Brake Rear Cables](#)

[Parking Brake Release Actuator - VIN Range: G00001->G03445 \(70.35.45\)](#)

[Parking Brake Release Actuator - VIN Range: G03446->H99999 \(70.35.45\)](#)

[Parking Brake Switch \(70.35.46\)](#)

206-06 : Hydraulic Brake Actuation

[Specifications](#)

[Specifications](#)

[Description and Operation](#)

[Hydraulic Brake Actuation](#)

[Hydraulic Brake Actuation](#)

[Diagnosis and Testing](#)

[Hydraulic Brake Actuation](#)

[Removal and Installation](#)

[Brake Fluid Reservoir \(70.30.16\)](#)

[Brake Master Cylinder - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8 \(70.30.08\)](#)

[Brake Master Cylinder - 2.7L V6 - TdV6 \(70.30.08\)](#)

206-07 : Power Brake Actuation

[Specifications](#)

[Specifications](#)

[Description and Operation](#)

[Brake Booster](#)

[Brake Booster](#)

[Diagnosis and Testing](#)

[Power Brake System](#)

[Removal and Installation](#)

[Brake Booster \(70.50.17\)](#)

[Brake Vacuum Pump](#)

206-09 : Anti-Lock Control - Stability Assist

[Specifications](#)

[Specifications](#)

[Description and Operation](#)

[Anti-Lock Control - Stability Assist - VIN Range: G00442->G45703](#)

[Anti-Lock Control - Stability Assist - VIN Range: G45704->G99999](#)

[Anti-Lock Control - Stability Assist](#)

[Diagnosis and Testing](#)

[Anti-Lock Control - Stability Assist - VIN Range: G00442->G45703](#)

[Anti-Lock Control - Stability Assist - VIN Range: G45704->G99999](#)

[Removal and Installation](#)

[Anti-Lock Brake System \(ABS\) Module \(70.60.02\)](#)

Brake Master Cylinder Pressure Transducer
Brake Pedal Travel Sensor - VIN Range: G00442->G49700
Front Wheel Speed Sensor (70.60.03)
Hydraulic Control Unit (HCU) - VIN Range: G00442->G45703 (70.60.18)
Hydraulic Control Unit (HCU) - VIN Range: G45704->G99999 (70.60.18)
Rear Wheel Speed Sensor (70.60.04)
Steering Wheel Rotation Sensor (86.56.58)
Yaw Rate Sensor and Accelerometer (86.56.64)

211 : Steering System

211-00 : Steering System - General Information

Specifications

[Specifications](#)

General Procedures

[Power Steering System Bleeding \(57.15.02 \)](#)

[Steering Column Lower Shaft Setting](#)

[Power Steering System Flushing \(57.15.08\)](#)

Description and Operation

[Steering System](#)

Diagnosis and Testing

[Steering System](#)

211-02 : Power Steering

Specifications

[Specifications](#)

Description and Operation

[Power Steering](#)

Diagnosis and Testing

[Power Steering](#)

Removal and Installation

[Power Steering Control Valve Actuator \(57.10.32\)](#)

[Power Steering Fluid Cooler \(57.15.11\)](#)

[Power Steering Fluid Reservoir - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8 \(57.15.08\)](#)

[Power Steering Fluid Reservoir - 2.7L V6 - TdV6 \(57.15.08\)](#)

[Power Steering Pump - 3.0L NA V6 - AJ27 \(57.20.14\)](#)

[Power Steering Pump - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8 \(57.20.14\)](#)

[Power Steering Pump - 2.7L V6 - TdV6 \(57.20.14\)](#)

[Steering Gear \(57.10.01\)](#)

[Steering Gear Bushing \(57.10.30\)](#)

211-03 : Steering Linkage

Specifications

[Specifications](#)

Description and Operation

[Steering Linkage](#)

Diagnosis and Testing

[Steering Linkage](#)

Removal and Installation

[Steering Gear Boot \(57.10.29\)](#)

[Tie Rod End \(57.55.02\)](#)

211-04 : Steering Column

Specifications

[Specifications](#)

Description and Operation

[Steering Column](#)

Diagnosis and Testing

[Steering Column](#)

Removal and Installation

[Ignition Switch Lock Cylinder \(57.40.29\)](#)

[Steering Column \(57.40.01\)](#)

[Steering Column Lower Shaft \(57.40.05\)](#)

[Steering Wheel \(57.60.01\)](#)

Assembly & Disassembly

[Steering Column](#)

211-05 : Steering Column Switches

Description and Operation

[Steering Column Switches](#)

Diagnosis and Testing

[Steering Column Switches](#)

Removal and Installation

[Steering Column Lock Actuator \(57.40.41\)](#)

[Steering Column Multifunction Switch LH \(86.65.78\)](#)

[Steering Column Multifunction Switch RH \(86.65.41\)](#)

3 : Powertrain

303 : Engine

303-00 : Engine System - General Information

Specifications

[Specifications](#)

General Procedures

[Bearing Inspection](#)

[Camshaft Bearing Journal Clearance](#)

[Camshaft Bearing Journal Diameter](#)

[Camshaft End Play](#)

[Camshaft Lobe Lift](#)

[Camshaft Surface Inspection](#)

[Connecting Rod Cleaning](#)

[Connecting Rod Large End Bore](#)

[Crankshaft End Play](#)

[Crankshaft Main Bearing Journal Clearance - 3.0L NA V6 - AJ27](#)

[Crankshaft Main Bearing Journal Clearance - 4.2L NA V8 - AJV8/4.2L SC V8](#)

[- AJV8/3.5L NA V8 - AJV8](#)

[Cylinder Bore Out-of-Round](#)

[Cylinder Head Distortion](#)

[Exhaust Manifold Cleaning and Inspection](#)

[Piston Inspection](#)

[Piston Pin Diameter](#)

[Piston Pin to Bore Diameter](#)

[Piston Ring End Gap](#)

[Piston Ring-to-Groove Clearance](#)

[Valve Spring Free Length](#)

[Valve Stem Diameter](#)

Description and Operation

[Engine](#)

Diagnosis and Testing

[Engine - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA](#)

[V8 - AJV8](#)

[Engine - 2.7L V6 - TdV6](#)

303-01A : Engine - 3.0L NA V6 - AJ27

Specifications

[Specifications](#)

General Procedures

[Valve Clearance Adjustment \(12.29.48\)](#)

[Valve Clearance Check \(12.29.47\)](#)

Description and Operation

[Engine](#)

Diagnosis and Testing

[Engine](#)

Removal

[Engine \(12.41.01\)](#)

Installation

[Engine \(12.41.01\)](#)

In Vehicle Repair

[Camshafts LH \(12.13.19\)](#)

[Crankshaft Front Seal \(12.21.14\)](#)

[Crankshaft Pulley \(12.21.09\)](#)

[Crankshaft Rear Seal \(12.21.20\)](#)

[Cylinder Head \(12.29.01\)](#)

[Engine Front Cover \(12.65.01\)](#)

[Engine Mount \(12.45.13\)](#)

[Exhaust Manifold LH - VIN Range: G004442->G45703 \(30.15.55\)](#)

[Exhaust Manifold LH - VIN Range: G45704->G99999 \(30.15.55\)](#)

[Flexplate \(12.53.13\)](#)

[Intake Manifold \(30.15.01\)](#)

[Lower Intake Manifold \(30.15.61\)](#)

[Oil Cooler \(12.60.68\)](#)

[Oil Pan \(12.60.44\)](#)

[Oil Pump \(12.60.26\)](#)

[Timing Drive Components \(12.65.13\)](#)

[Valve Cover LH \(12.29.43\)](#)

[Valve Cover RH \(12.29.44\)](#)

Disassembly

[Engine](#)

Disassembly/Assembly of subassemblies

[Cylinder Head \(12.29.22\)](#)

[Piston \(12.17.02\)](#)

Assembly

[Engine](#)

303-01B : Engine - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8

Specifications

[Specifications](#)

General Procedures

[Valve Clearance Adjustment \(12.29.48\)](#)

[Valve Clearance Check \(12.29.47\)](#)

Description and Operation

[Engine](#)

Diagnosis and Testing

[Engine](#)

Removal and Installation

[Crankshaft Main Bearing Carrier](#)

Removal

[Engine \(12.41.01\)](#)

Installation

[Engine \(12.41.01\)](#)

In Vehicle Repair

[Camshafts RH - VIN Range: G00442->G45703 \(12.13.18\)](#)

[Camshafts RH - VIN Range: G45704->G99999 \(12.13.18\)](#)

[Crankshaft Front Seal - VIN Range: G00442->G45703 \(12.21.14\)](#)

[Crankshaft Front Seal - VIN Range: G45704->G99999 \(12.21.14\)](#)

[Crankshaft Pulley \(12.21.09\)](#)

[Crankshaft Rear Seal \(12.21.20\)](#)

[Cylinder Head LH - VIN Range: G00442->G45703 \(12.29.02\)](#)

[Cylinder Head LH - VIN Range: G45704->G99999 \(12.29.02\)](#)

[Engine Front Cover - VIN Range: G00442->G45703 \(12.65.01\)](#)

[Engine Front Cover - VIN Range: G45704->G99999 \(12.65.01\)](#)

[Engine Mount LH \(12.45.01\)](#)

[Engine Mount RH \(12.45.03\)](#)

[Exhaust Manifold RH - VIN Range: G00442->G45703 \(30.15.56\)](#)

[Exhaust Manifold RH - VIN Range: G45704->G99999 \(30.15.56\)](#)

[Flexplate \(12.53.13\)](#)

[Intake Manifold - VIN Range: G00442->G45703 \(30.15.01\)](#)

[Intake Manifold - VIN Range: G45704->G99999 \(30.15.01\)](#)

[Oil Cooler - Vehicles With: Supercharger \(12.60.68\)](#)

[Oil Cooler - Vehicles Without: Supercharger \(12.60.68\)](#)

[Oil Pan \(12.60.44\)](#)

[Oil Pan Extension \(12.60.48\)](#)

[Oil Pump - VIN Range: G00442->G45703 \(12.60.26\)](#)

[Oil Pump - VIN Range: G45704->G99999 \(12.60.26\)](#)

[Secondary Timing Chain Tensioner](#)

[Timing Drive Components - VIN Range: G00442->G45703 \(12.65.13\)](#)

[Timing Drive Components - VIN Range: G45704->G99999 \(12.65.13\)](#)

[Valve Cover LH - VIN Range: G00442->G45703 \(12.29.43\)](#)

[Valve Cover LH - VIN Range: G45704->G99999 \(12.29.43\)](#)

[Valve Cover RH - VIN Range: G00442->G45703 \(12.29.44\)](#)

[Valve Cover RH - VIN Range: G45704->G99999 \(12.29.44\)](#)

Disassembly

[Engine](#)

Disassembly/Assembly of subassemblies

[Cylinder Head \(12.29.22\)](#)

Assembly

[Engine](#)

303-01C : Engine - 2.7L V6 - TdV6

Specifications

[Specifications](#)

Description and Operation

[Engine](#)

Diagnosis and Testing

[Engine](#)

Removal

[Engine \(12.41.01\)](#)

Installation

[Engine \(12.41.01\)](#)

In Vehicle Repair

[Camshaft Front Seal](#)

[Camshaft Rear Seal](#)

[Camshafts LH \(12.13.19\)](#)

[Crankshaft Front Seal \(12.21.14\)](#)

[Crankshaft Rear Seal \(12.21.20\)](#)

[Crankshaft Vibration Damper \(12.21.09\)](#)

[Cylinder Head LH \(12.29.02\)](#)

[Engine Mount LH \(12.45.01\)](#)

[Engine Mount RH \(12.45.03\)](#)

[Exhaust Manifold LH \(30.15.55\)](#)

[Exhaust Manifold RH \(30.15.56\)](#)

[Flexplate \(12.53.13\)](#)

[Oil Filter Element \(12.60.02\)](#)

[Oil Pan \(12.60.44\)](#)

[Oil Pan Extension \(12.60.48\)](#)

[Oil Pump \(12.60.26\)](#)

[Timing Belt](#)

[Timing Belt Cover](#)

[Valve Cover LH \(12.29.43\)](#)

[Valve Cover RH \(12.29.44\)](#)

303-03A : Engine Cooling - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8

Specifications

[Specifications](#)

General Procedures

[Cooling System Backflushing](#)

[Cooling System Draining, Filling and Bleeding](#)

[Cooling System Draining and Vacuum Filling](#)

[Cooling System Flushing](#)

Description and Operation

[Engine Cooling](#)

Diagnosis and Testing

[Engine Cooling](#)

Removal and Installation

[Coolant Expansion Tank \(26.15.01\)](#)

[Cooling Fan Motor and Shroud \(26.25.25\)](#)

[Radiator \(26.40.01\)](#)

[Thermostat - 3.0L NA V6 - AJ27 \(26.45.07\)](#)

[Thermostat - 4.2L NA V8 - AJV8/3.5L NA V8 - AJV8 \(26.45.07\)](#)

[Thermostat - 4.2L SC V8 - AJV8 \(26.45.07\)](#)

[Water Pump - 3.0L NA V6 - AJ27, VIN Range: G00442->G45703 \(26.50.01\)](#)

[Water Pump - 3.0L NA V6 - AJ27, VIN Range: G45704->G99999 \(26.50.01\)](#)

[Water Pump - 4.2L NA V8 - AJV8/3.5L NA V8 - AJV8 \(26.50.01\)](#)

[Water Pump - 4.2L SC V8 - AJV8 \(26.50.01\)](#)

303-03B : Supercharger Cooling

Specifications

[Specifications](#)

General Procedures

[Supercharger Cooling System Draining, Filling and Bleeding](#)

Description and Operation

[Supercharger Cooling](#)

Diagnosis and Testing

[Supercharger Cooling](#)

Removal and Installation

[Radiator](#)

[Water Pump](#)

303-03C : Engine Cooling - 2.7L V6 - TdV6

Specifications

[Specifications](#)

General Procedures

[Cooling System Draining, Filling and Bleeding](#)

[Cooling System Draining and Vacuum Filling](#)

Description and Operation

[Engine Cooling](#)

Diagnosis and Testing

[Engine Cooling](#)

Removal and Installation

[Coolant Expansion Tank \(26.15.01\)](#)

[Cooling Fan Motor and Shroud \(26.25.25\)](#)

[Radiator \(26.40.01\)](#)

[Thermostat \(26.45.07\)](#)

[Water Pump \(26.50.01\)](#)

303-04A : Fuel Charging and Controls - 3.0L NA V6 - AJ27

Specifications

[Specifications](#)

Description and Operation

[Fuel Charging and Controls](#)

Diagnosis and Testing

[Fuel Charging and Controls - VIN Range: G00442->G45703](#)

[Fuel Charging and Controls - VIN Range: G45704->G99999](#)

Removal and Installation

[Fuel Charging Wiring Harness \(86.70.22\)](#)

[Fuel Injectors \(18.10.02\)](#)

[Fuel Injection Supply Manifold \(19.60.13\)](#)

[Throttle Body - VIN Range: G00442->G45703 \(19.70.04\)](#)

[Throttle Body - VIN Range: G45704->G99999 \(19.70.04\)](#)

303-04B : Fuel Charging and Controls - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8

Specifications

[Specifications](#)

Description and Operation

[Fuel Charging and Controls](#)

Diagnosis and Testing

[Fuel Charging and Controls - VIN Range: G00442->G45703](#)

[Fuel Charging and Controls - VIN Range: G45704->G99999](#)

Removal and Installation

[Fuel Injection Supply Manifold \(19.60.13\)](#)

[Fuel Injectors \(18.10.02\)](#)

[Throttle Body - 4.2L SC V8 - AJV8, VIN Range: G00442->G45703 \(19.70.04\)](#)

[Throttle Body - 4.2L SC V8 - AJV8, VIN Range: G45704->G99999 \(19.70.04\)](#)

[Throttle Body - 4.2L NA V8 - AJV8/3.5L NA V8 - AJV8, VIN Range: G00442->G45703 \(19.70.04\)](#)

[Throttle Body - 4.2L NA V8 - AJV8/3.5L NA V8 - AJV8, VIN Range: G45704->G99999 \(19.70.04\)](#)

303-04C : Fuel Charging and Controls - 2.7L V6 - TdV6

Specifications

[Specifications](#)

General Procedures

[Fuel Injection Component Cleaning](#)

Description and Operation

[Fuel Charging and Controls](#)

Diagnosis and Testing

[Fuel Charging and Controls](#)

Removal and Installation

[Fuel Diverter Rail](#)

[Fuel Injection Pump](#)

[Fuel Injector \(18.10.01\)](#)

[Fuel Rail](#)

[Intake Air Shutoff Throttle](#)

[Swirl Plate Actuator Diaphragm](#)

303-04D : Fuel Charging and Controls - Turbocharger - 2.7L V6 - TdV6

Specifications

[Specifications](#)

Description and Operation

[Turbocharger](#)

Diagnosis and Testing

[Turbocharger](#)

Removal and Installation

[Turbocharger LH](#)

[Turbocharger RH](#)

303-05 : Accessory Drive

Specifications

[Specifications](#)

Description and Operation

[Accessory Drive](#)

Diagnosis and Testing

[Accessory Drive - 3.0L/3.5L/4.2L](#)

[Accessory Drive - 2.7L Diesel](#)

Removal and Installation

[Accessory Drive Belt - 3.0L NA V6 - AJ27, VIN Range: G00442->G45703 \(12.10.40\)](#)

[Accessory Drive Belt - 3.0L NA V6 - AJ27, VIN Range: G45704->G99999 \(12.10.40\)](#)

[Accessory Drive Belt - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8 \(12.10.40\)](#)

[Accessory Drive Belt - 2.7L V6 - TdV6 \(12.10.40\)](#)

[Accessory Drive Belt Idler Pulley - 3.0L NA V6 - AJ27, VIN Range: G00442->G45703 \(12.10.43\)](#)

[Accessory Drive Belt Idler Pulley - 3.0L NA V6 - AJ27, VIN Range: G45704->G99999 \(12.10.43\)](#)

[Accessory Drive Belt Idler Pulley - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8, VIN Range: G00442->G45703 \(12.10.43\)](#)

[Accessory Drive Belt Idler Pulley - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8, VIN Range: G45704->G99999 \(12.10.43\)](#)

[Accessory Drive Belt Idler Pulley - 2.7L V6 - TdV6 \(12.10.43\)](#)

[Accessory Drive Belt Tensioner - 3.0L NA V6 - AJ27, VIN Range: G00442->G45703 \(12.10.41\)](#)

[Accessory Drive Belt Tensioner - 3.0L NA V6 - AJ27, VIN Range: G45704->G99999 \(12.10.41\)](#)

[Accessory Drive Belt Tensioner - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8 \(12.10.41\)](#)

[Accessory Drive Belt Tensioner - 2.7L V6 - TdV6 \(12.10.41\)](#)

Fuel Injection Pump Belt

Fuel Injection Pump Pulley

[Supercharger Belt - VIN Range: G00442->G45703 \(18.50.08\)](#)

[Supercharger Belt - VIN Range: G45704->G99999 \(18.50.08\)](#)

[Supercharger Belt Idler Pulley - VIN Range: G00442->G45703 \(18.50.09\)](#)

[Supercharger Belt Idler Pulley - VIN Range: G45704->G99999 \(18.50.09\)](#)

[Supercharger Belt Tensioner - VIN Range: G00442->G45703 \(18.50.24\)](#)

[Supercharger Belt Tensioner - VIN Range: G45704->G99999 \(18.50.24\)](#)

303-06 : Starting System

Specifications

[Specifications](#)

Description and Operation

[Starting System](#)

Diagnosis and Testing

[Starting System](#)

Removal and Installation

[Starter Motor - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8 \(86.60.01\)](#)

[Starter Motor - 2.7L V6 - TdV6 \(86.60.01\)](#)

303-07A : Engine Ignition - 3.0L NA V6 - AJ27

Specifications

[Specifications](#)

Description and Operation

[Engine Ignition](#)

Diagnosis and Testing

[Engine Ignition - VIN Range: G00442->G45703](#)

[Engine Ignition - VIN Range: G45704->G99999](#)

Removal and Installation

[Ignition Coil-On-Plug LH \(18.20.44\)](#)

[Ignition Coil-On-Plug RH \(18.20.43\)](#)

303-07B : Engine Ignition - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8

Specifications

[Specifications](#)

Description and Operation

[Engine Ignition](#)

Diagnosis and Testing

[Engine Ignition - VIN Range: G00442->G45703](#)

[Engine Ignition - VIN Range: G45704->G99999](#)

Removal and Installation

[Ignition Coil-On-Plug \(18.20.40\)](#)

303-07C : Glow Plug System

Specifications

[Specifications](#)

Description and Operation

[Glow Plug System](#)

Diagnosis and Testing

[Glow Plug System](#)

Removal and Installation

[Glow Plugs](#)

303-08A : Engine Emission Control - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L

NA V6 - AJ27/3.5L NA V8 - AJV8

Specifications

[Specifications](#)

[Specifications](#)

Description and Operation

[Engine Emission Control - VIN Range: G00442->G45703](#)

[Engine Emission Control - VIN Range: G45704->G99999](#)

Diagnosis and Testing

[Engine Emission Control - VIN Range: G00442->G45703](#)

[Engine Emission Control - VIN Range: G45704->G99999](#)

Removal and Installation

[Exhaust Gas Recirculation \(EGR\) Valve \(17.45.01\)](#)

[Exhaust Manifold to Exhaust Gas Recirculation \(EGR\) Valve Tube \(17.45.11\)](#)

[Secondary Air Injection \(AIR\) Control Valve - 3.0L NA V6 - AJ27](#)

[Secondary Air Injection \(AIR\) Control Valve - 4.2L NA V8 - AJV8/3.5L NA V8 - AJV8](#)

[Secondary Air Injection \(AIR\) Control Valve - 4.2L SC V8 - AJV8](#)

[Secondary Air Injection \(AIR\) Control Valve to Exhaust Manifold Tube LH - 3.0L NA V6 - AJ27](#)

[Secondary Air Injection \(AIR\) Control Valve to Exhaust Manifold Tube RH - 3.0L NA V6 - AJ27](#)

[Secondary Air Injection \(AIR\) Control Valve to Exhaust Manifold Tube - 4.2L NA V8 - AJV8/3.5L NA V8 - AJV8, 4.2L](#)

[Secondary Air Injection \(AIR\) Control Valve to Exhaust Manifold Tube - 4.2L SC V8 - AJV8, 4.2L](#)

[Secondary Air Injection \(AIR\) Pump](#)

303-08B : [Engine Emission Control - 2.7L V6 - TdV6](#)

Specifications

[Specifications](#)

Description and Operation

[Engine Emission Control](#)

Diagnosis and Testing

[Engine Emission Control](#)

Removal and Installation

[Crankcase Vent Oil Separator](#)

[Exhaust Gas Recirculation \(EGR\) Valve LH](#)

[Exhaust Gas Recirculation \(EGR\) Valve Outlet Tube \(17.45.11\)](#)

[Exhaust Gas Recirculation \(EGR\) Valve RH](#)

303-12A : [Intake Air Distribution and Filtering - 3.0L NA V6 - AJ27](#)

Specifications

[Specifications](#)

Description and Operation

[Intake Air Distribution and Filtering](#)

Diagnosis and Testing

[Intake Air Distribution and Filtering - VIN Range: G00442->G45703](#)

[Intake Air Distribution and Filtering - VIN Range: G45704->G99999](#)

Removal and Installation

[Air Cleaner \(19.10.05\)](#)

[Air Cleaner Element \(19.10.08\)](#)

[Air Cleaner Outlet Pipe \(19.10.31\)](#)

303-12B : Intake Air Distribution and Filtering - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8

Specifications

[Specifications](#)

Description and Operation

[Intake Air Distribution and Filtering](#)

Diagnosis and Testing

[Intake Air Distribution and Filtering - VIN Range: G00442->G45703](#)

[Intake Air Distribution and Filtering - VIN Range: G45704->G99999](#)

Removal and Installation

[Air Cleaner \(19.10.05\)](#)

[Air Cleaner Element \(19.10.08\)](#)

[Air Cleaner Outlet Pipe \(19.10.31\)](#)

[Charge Air Cooler](#)

[Supercharger - VIN Range: G00442->G45703 \(18.50.15\)](#)

[Supercharger - VIN Range: G45704->G99999 \(18.50.15\)](#)

[Supercharger Outlet Pipe \(18.50.16\)](#)

303-12C : Intake Air Distribution and Filtering - 2.7L V6 - TdV6

Specifications

[Specifications](#)

Description and Operation

[Intake Air Distribution and Filtering](#)

Diagnosis and Testing

[Intake Air Distribution and Filtering](#)

Removal and Installation

[Air Cleaner \(19.10.05\)](#)

[Air Cleaner Element \(19.10.08\)](#)

[Charge Air Cooler](#)

303-13 : Evaporative Emissions

Specifications

[Specifications](#)

Description and Operation

[Evaporative Emissions - VIN Range: G00442->G45703](#)

[Evaporative Emissions - VIN Range: G45704->G99999](#)

Diagnosis and Testing

[Evaporative Emissions - VIN Range: G00442->G45703](#)

[Evaporative Emissions - VIN Range: G45704->G99999](#)

Removal and Installation

Evaporative Emission Canister - VIN Range: G00442->G45703 (17.15.13)

Evaporative Emission Canister - VIN Range: G45704->G99999 (17.15.13)

Evaporative Emission Canister Purge Valve - VIN Range: G00442->G45703 (17.15.30)

Evaporative Emission Canister Purge Valve - 3.0L NA V6 - AJ27, VIN Range: G45704->G99999 (17.15.30)

Evaporative Emission Canister Purge Valve - 4.2L SC V8 - AJV8/3.5L NA V8 - AJV8, VIN Range: G45171->G99999 (17.15.30)

Evaporative Emission Canister Purge Valve - 4.2L NA V8 - AJV8/3.5L NA V8 - AJV8, VIN Range: G45171->G99999 (17.15.30)

Evaporative Emission Canister Vent Solenoid (17.15.45)

Fuel Tank Pressure Sensor (19.55.31)

303-14A : Electronic Engine Controls - 3.0L NA V6 - AJ27

Specifications

Specifications

General Procedures

Brake Pedal Position (BPP) Switch Adjustment

Description and Operation

Electronic Engine Controls

Diagnosis and Testing

Electronic Engine Controls - VIN Range: G00442->G45703

Electronic Engine Controls - VIN Range: G45704->G99999

Removal and Installation

Brake Pedal Position (BPP) Switch

Camshaft Position (CMP) Sensor LH (18.31.12)

Camshaft Position (CMP) Sensor RH (18.31.11)

Catalyst Monitor Sensor (18.30.66)

Crankshaft Position (CKP) Sensor (18.30.12)

Engine Control Module (ECM) (18.30.01)

Engine Coolant Temperature (ECT) Sensor - VIN Range: G00442->G45703 (18.30.10)

Engine Coolant Temperature (ECT) Sensor - VIN Range: G45704->G99999 (18.30.10)

Fuel Rail Pressure (FRP) Sensor (18.30.98)

Fuel Temperature Sensor (18.30.99)

Heated Oxygen Sensor (HO2S)

Intake Manifold Tuning (IMT) Valve LH (19.70.30)

Knock Sensor (KS) LH (18.30.92)

Knock Sensor (KS) RH (18.30.93)

Manifold Absolute Pressure (MAP) Sensor (18.30.86)

Mass Air Flow (MAF) Sensor (18.30.15)

Oil Temperature Sensor (18.31.01)

Variable Camshaft Timing (VCT) Oil Control Solenoid (18.30.90)

303-14B : Electronic Engine Controls - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8

Specifications

[Specifications](#)

General Procedures

[Brake Pedal Position \(BPP\) Switch Adjustment](#)

[Powertrain Control Module \(PCM\) Long Drive Cycle Self-Test](#)

[Powertrain Control Module \(PCM\) Short Drive Cycle Self-Test](#)

Description and Operation

[Electronic Engine Controls](#)

Diagnosis and Testing

[Electronic Engine Controls - VIN Range: G00442->G45703](#)

[Electronic Engine Controls - VIN Range: G45704->G99999](#)

Removal and Installation

[Brake Pedal Position \(BPP\) Switch](#)

[Camshaft Position \(CMP\) Sensor LH \(18.31.12\)](#)

[Camshaft Position \(CMP\) Sensor RH \(18.31.11\)](#)

[Catalyst Monitor Sensor \(18.30.66\)](#)

[Crankshaft Position \(CKP\) Sensor \(18.30.12\)](#)

[Engine Control Module \(ECM\) \(18.30.01\)](#)

[Engine Coolant Temperature \(ECT\) Sensor - 4.2L SC V8 - AJV8 \(18.30.10\)](#)

[Engine Coolant Temperature \(ECT\) Sensor - 4.2L NA V8 - AJV8 \(18.30.10\)](#)

[Fuel Rail Pressure \(FRP\) Sensor \(18.30.98\)](#)

[Fuel Temperature Sensor \(18.30.99\)](#)

[Heated Oxygen Sensor \(HO2S\)](#)

[Intake Air Temperature \(IAT\) Sensor - 4.2L SC V8 - AJV8 \(18.30.52\)](#)

[Knock Sensor \(KS\) LH \(18.30.92\)](#)

[Manifold Absolute Pressure \(MAP\) Sensor - 4.2L SC V8 - AJV8 \(18.30.86\)](#)

[Manifold Absolute Pressure \(MAP\) Sensor - 4.2L NA V8 - AJV8 \(18.30.86\)](#)

[Mass Air Flow \(MAF\) Sensor \(18.30.15\)](#)

[Oil Temperature Sensor \(18.31.01\)](#)

[Variable Camshaft Timing \(VCT\) Oil Control Solenoid \(18.30.90\)](#)

303-14C : Electronic Engine Controls - 2.7L V6 - TdV6

Specifications

[Specifications](#)

General Procedures

[Brake Pedal Position \(BPP\) Switch Adjustment](#)

Description and Operation

[Electronic Engine Controls](#)

Diagnosis and Testing

[Electronic Engine Controls](#)

Removal and Installation

[Brake Pedal Position \(BPP\) Switch](#)

[Camshaft Position \(CMP\) Sensor \(18.30.63\)](#)

Crankshaft Position (CKP) Sensor (18.30.12)
Crankshaft Position (CKP) Sensor Ring
Engine Control Module (ECM) (18.30.01)
Engine Coolant Temperature (ECT) Sensor (18.30.10)
Exhaust Gas Temperature Sensor
Engine Oil Pressure (EOP) Sensor
Fuel Rail Pressure (FRP) Sensor (18.30.98)
Fuel Temperature Sensor (18.30.99)
Intake Air Temperature (IAT) Sensor (18.30.52)
Knock Sensor (KS) LH (18.30.92)
Knock Sensor (KS) RH (18.30.93)
Manifold Absolute Pressure (MAP) Sensor (18.30.86)
Mass Air Flow (MAF) Sensor (18.30.15)
Oil Temperature Sensor (18.31.01)

307 : Automatic Transmission/Transaxle

307-01 : Automatic Transmission/Transaxle

Specifications

Specifications

General Procedures

Transmission Fluid Drain and Refill (44.24.02)

Transmission Fluid Level Check

Description and Operation

Transmission Description

Diagnosis and Testing

Diagnostic Strategy

Removal

Transmission - 3.0L NA V6 - AJ27 (44.20.01)

Transmission - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8
(44.20.01)

Transmission - 2.7L V6 - TdV6 (44.20.01)

Installation

Transmission - 3.0L NA V6 - AJ27 (44.20.01)

Transmission - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8
(44.20.01)

Transmission - 2.7L V6 - TdV6 (44.20.01)

In Vehicle Repair

Extension Housing Seal (44.20.18)

Transmission Fluid Pan, Gasket and Filter (44.24.07)

Transmission Control Module (TCM) and Main Control Valve Body

Disassembly/Assembly of subassemblies

Input Shaft Seal (44.32.07)

307-02 : Transmission/Transaxle Cooling

Specifications

Specifications

Description and Operation

[Transmission Cooling](#)

Diagnosis and Testing

[Transmission Cooling](#)

Removal and Installation

[Transmission Fluid Cooler - 2.7L V6 - TdV6 \(44.24.10\)](#)

[Transmission Fluid Cooler Tubes - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8 \(44.24.19\)](#)

[Transmission Fluid Cooler Tubes - 2.7L V6 - TdV6 \(44.24.19\)](#)

307-05 : Automatic Transmission/Transaxle External Controls

Specifications

[Specifications](#)

General Procedures

[Selector Lever Cable Adjustment \(44.15.07\)](#)

Description and Operation

[External Controls](#)

Diagnosis and Testing

[External Controls](#)

Removal and Installation

[Selector Lever Cable and Bracket \(44.15.08\)](#)

[Selector Lever Assembly \(44.15.04\)](#)

309 : Exhaust System

309-00 : Exhaust System

Specifications

[Specifications](#)

Description and Operation

[Exhaust System](#)

Diagnosis and Testing

[Exhaust System](#)

Removal and Installation

[Catalytic Converter - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8 \(17.50.05\)](#)

[Catalytic Converter - 2.7L V6 - TdV6 \(17.50.05\)](#)

[Diesel Particulate Filter \(DPF\)](#)

[Diesel Particulate Filter \(DPF\) Differential Pressure Sensor](#)

[Exhaust System - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8](#)

[Exhaust System - 2.7L V6 - TdV6](#)

[Front Muffler - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8 \(30.10.18\)](#)

[Front Muffler - 2.7L V6 - TdV6 \(30.10.18\)](#)

[Muffler and Tailpipe \(30.10.52\)](#)

310 : Fuel System

310-00 : Fuel System - General Information

Specifications

Specifications

General Procedures

Fuel System Pressure Check

Fuel System Pressure Release - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8 (19.50.02)

Fuel System Pressure Release - 2.7L V6 - TdV6 (19.50.02)

Fuel Tank Draining - VIN Range: G00442->G45703

Fuel Tank Draining - VIN Range: G45704->G99999

High-Pressure Fuel System Bleeding - 2.7L V6 - TdV6

Low-Pressure Fuel System Bleeding - 2.7L V6 - TdV6

Quick Release Coupling

Quick Release Coupling - Push Connect

Spring Lock Couplings

Description and Operation

Fuel System - VIN Range: G00442->G45703

Fuel System - VIN Range: G45704->G99999

310-01 : Fuel Tank and Lines

Specifications

Specifications

Description and Operation

Fuel Tank and Lines - VIN Range: G00442->G45703

Fuel Tank and Lines - VIN Range: G45704->G99999

Diagnosis and Testing

Fuel Tank and Lines - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8, VIN Range: G00442->G45703

Fuel Tank and Lines - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8, VIN Range: G45704->G99999

Fuel Tank and Lines - 2.7L V6 - TdV6

Removal and Installation

Fuel Filter - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8 (19.25.02)

Fuel Filter - 2.7L V6 - TdV6 (19.25.02)

Fuel Level Sender LH - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8, VIN Range: G00442->G45703

Fuel Level Sender LH - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8, VIN Range: G45704->G99999

Fuel Level Sender LH - 2.7L V6 - TdV6

Fuel Level Sender RH - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8, VIN Range: G00442->G45703

Fuel Level Sender RH - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA V8 - AJV8, VIN Range: G45704->G99999

Fuel Level Sender RH - 2.7L V6 - TdV6

Fuel Pump Module - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 -

AJ27/3.5L NA V8 - AJV8, VIN Range: G00442->G45703 (19.45.08)
Fuel Pump Module - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 -
AJ27/3.5L NA V8 - AJV8, VIN Range: G45704->G99999 (19.45.08)
Fuel Pump Module - 2.7L V6 - TdV6 (19.45.08)
Fuel Tank - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 - AJ27/3.5L NA
V8 - AJV8 (19.55.01)
Fuel Tank - 2.7L V6 - TdV6 (19.55.01)
Fuel Tank Filler Pipe (19.55.33)
Fuel Transfer Pump - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 -
AJ27/3.5L NA V8 - AJV8, VIN Range: G00442->G45703 (19.45.21)
Fuel Transfer Unit - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 -
AJ27/3.5L NA V8 - AJV8, VIN Range: G45704->G99999
Fuel Transfer Unit - 2.7L V6 - TdV6
Inertia Fuel Shutoff (IFS) Switch (18.30.35)

310-02 : Acceleration Control

Specifications

Specifications

Description and Operation

Acceleration Control

Diagnosis and Testing

Acceleration Control

Removal and Installation

Accelerator Pedal (19.20.01)

310-03 : Speed Control

Specifications

Specifications

General Procedures

Speed Control Module Alignment - VIN Range: G00442->H18679

Speed Control Module Alignment - VIN Range: H18680->H99999

Description and Operation

Speed Control - VIN Range: G00442->G45703

Speed Control - VIN Range: G45704->G99999

Diagnosis and Testing

Speed Control - VIN Range: G00442->G45703

Speed Control - VIN Range: G45704->G99999

Removal and Installation

Speed Control Deactivator Switch (19.75.20)

Speed Control Module (19.75.26)

Speed Control Sensor

Speed Control Switch (19.75.25)

4 : Electrical

412 : Climate Control System

412-00 : Climate Control System - General Information

Specifications

[Specifications](#)

General Procedures

[Air Conditioning \(A/C\) System Flushing](#)

[Air Conditioning \(A/C\) System Recovery, Evacuation and Charging \(82.30.30\)](#)

[Contaminated Refrigerant Handling](#)

[Electronic Leak Detection](#)

[Fluorescent Dye Leak Detection](#)

[Inspection and Assembly Requirements](#)

[Manifold Gauge Set Connection](#)

[Refrigerant Oil Adding](#)

[Refrigerant System Tests](#)

Description and Operation

[Climate Control System](#)

Diagnosis and Testing

[Climate Control System](#)

412-01 : Air Distribution and Filtering

Specifications

[Specifications](#)

Description and Operation

[Air Distribution and Filtering](#)

Diagnosis and Testing

[Air Distribution and Filtering](#)

Removal and Installation

[Cabin Air Filter \(76.10.09\)](#)

[Center Registers \(82.20.38\)](#)

[Driver Side Register \(82.20.39\)](#)

[Floor Console Register Duct \(82.20.37\)](#)

[Front Footwell Duct LH \(82.20.91\)](#)

[Front Footwell Duct RH \(82.20.92\)](#)

[Passenger Side Register \(82.20.40\)](#)

[Rear Footwell Duct \(82.20.96\)](#)

412-02A : Heating and Ventilation

Specifications

[Specifications](#)

Description and Operation

[Heating and Ventilation](#)

Diagnosis and Testing

[Heating and Ventilation](#)

Removal and Installation

[Auxiliary Coolant Flow Pump - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8 \(82.25.59\)](#)

[Auxiliary Coolant Flow Pump - 2.7L V6 - TdV6 \(82.25.59\)](#)

[Blower Motor \(82.25.66\)](#)

[Heater Core \(80.20.29\)](#)

[Heater Core and Evaporator Core Housing \(82.25.21\)](#)

[Heater Hose \(80.25.01\)](#)

412-02B : Auxiliary Heating

Specifications

[Specifications](#)

Description and Operation

[Fuel Fired Booster Heater](#)

Diagnosis and Testing

[Fuel Fired Booster Heater](#)

Removal and Installation

[Fuel Fired Booster Heater](#)

412-03A : Air Conditioning

Specifications

[Specifications](#)

Description and Operation

[Air Conditioning](#)

Diagnosis and Testing

[Air Conditioning](#)

Removal and Installation

[Air Conditioning \(A/C\) Compressor - 3.0L NA V6 - AJ27, VIN Range:](#)

[G00442->G45703 \(82.10.20\)](#)

[Air Conditioning \(A/C\) Compressor - 3.0L NA V6 - AJ27, VIN Range:](#)

[G45704->G99999 \(82.10.20\)](#)

[Air Conditioning \(A/C\) Compressor - 4.2L NA V8 - AJV8/4.2L SC V8 -](#)

[AJV8/3.5L NA V8 - AJV8, VIN Range: G00442->G45703 \(82.10.20\)](#)

[Air Conditioning \(A/C\) Compressor - 4.2L NA V8 - AJV8/4.2L SC V8 -](#)

[AJV8/3.5L NA V8 - AJV8, VIN Range: G45704->G99999 \(82.10.20\)](#)

[Air Conditioning \(A/C\) Compressor - 2.7L V6 - TdV6 \(82.10.20\)](#)

[Condenser Core - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 -](#)

[AJ27/3.5L NA V8 - AJV8 \(82.15.07\)](#)

[Condenser Core - 2.7L V6 - TdV6 \(82.15.07\)](#)

[Desiccant Bag - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 -](#)

[AJ27/3.5L NA V8 - AJV8 \(82.17.03\)](#)

[Desiccant Bag - 2.7L V6 - TdV6 \(82.17.03\)](#)

[Pressure Cutoff Switch - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.0L NA V6 -](#)

[AJ27/3.5L NA V8 - AJV8 \(82.10.32\)](#)

[Pressure Cutoff Switch - 2.7L V6 - TdV6 \(82.10.32\)](#)

412-03B : Auxiliary Climate Control

Specifications

Specifications

Description and Operation

[Auxiliary Climate Control](#)

Diagnosis and Testing

[Auxiliary Climate Control](#)

Removal and Installation

[Auxiliary Climate Control Assembly](#)

[Auxiliary Evaporator Outlet and Inlet Line](#)

[Auxiliary Footwell Vent/Duct Blend Door Actuator](#)

[Auxiliary Heater Core and Evaporator Core Housing](#)

[Auxiliary Temperature Blend Door Actuator](#)

[Auxiliary Blower Motor](#)

[Auxiliary Blower Motor Resistor](#)

[Evaporator Core](#)

[Heater Core](#)

[Register](#)

412-04 : Control Components

Specifications

[Specifications](#)

Description and Operation

[Control Components](#)

[Control Components - VIN Range: H18680->H99999](#)

Diagnosis and Testing

[Control Components](#)

Removal and Installation

[Air Discharge Temperature Sensor \(82.20.64\)](#)

[Ambient Air Temperature Sensor \(82.20.02\)](#)

[Climate Control Assembly \(82.20.07\)](#)

[Cold Air Bypass Blend Door Actuator LH](#)

[Cold Air Bypass Blend Door Actuator RH](#)

[Defrost Vent/Register Blend Door Actuator LH](#)

[Defrost Vent/Register Blend Door Actuator RH](#)

[Footwell Vent/Duct Blend Door Actuator LH](#)

[Footwell Vent/Duct Blend Door Actuator RH](#)

[In-Vehicle Temperature Sensor \(82.20.03\)](#)

[Recirculation Blend Door Actuator \(82.20.67\)](#)

[Sunload Sensor \(82.20.70\)](#)

413 : Instrumentation and Warning Systems

413-00 : Instrument Cluster and Panel Illumination

Diagnosis and Testing

[Instrument Cluster and Panel Illumination](#)

413-01 : Instrument Cluster

Specifications

[Specifications](#)

Description and Operation

[Instrument Cluster](#)

Diagnosis and Testing

[Instrument Cluster](#)

Removal and Installation

[Indicator Bulb \(86.45.61\)](#)

[Instrument Cluster \(88.20.01\)](#)

[Instrument Cluster Lens \(88.20.28\)](#)

413-06 : Horn

Specifications

[Specifications](#)

Description and Operation

[Horn](#)

Diagnosis and Testing

[Horn](#)

Removal and Installation

[Horn \(86.30.02\)](#)

[Horn Switch \(86.30.01\)](#)

413-07 : Clock

Description and Operation

[Clock](#)

Diagnosis and Testing

[Clock](#)

Removal and Installation

[Clock \(88.15.07\)](#)

413-08 : Information and Message Center

Description and Operation

[Information and Message Center](#)

Diagnosis and Testing

[Information and Message Center](#)

Removal and Installation

[Message Center Switch \(86.66.11\)](#)

413-09A : Warning Devices

General Procedures

[Oil Change Indicator Reset](#)

Description and Operation

[Warning Devices](#)

Diagnosis and Testing

[Warning Devices](#)

413-13 : Parking Aid

Description and Operation

[Parking Aid](#)

Diagnosis and Testing

[Parking Aid](#)

Removal and Installation

[Front Parking Aid Speaker](#) (86.54.18)

[Parking Aid Module - VIN Range: G00442->G45703](#) (86.80.39)

[Parking Aid Module - VIN Range: G45704->G99999](#) (86.80.39)

[Parking Aid Sensor](#) (86.62.01)

[Rear Parking Aid Speaker](#) (86.54.19)

414 : Battery and Charging System

414-00 : Charging System - General Information

General Procedures

[Battery Charging](#)

Description and Operation

[Charging System](#)

Diagnosis and Testing

[Charging System](#)

[Charging System - 2.7L V6 - TdV6](#)

414-01 : Battery, Mounting and Cables

Specifications

[Specifications](#)

General Procedures

[Battery Connect](#) (86.15.15)

[Battery Disconnect and Connect](#)

Description and Operation

[Battery and Cables](#)

Diagnosis and Testing

[Battery](#)

Removal and Installation

[Battery](#) (86.15.01)

[Battery Ground Cable](#) (86.15.19)

[Battery Tray](#) (86.15.11)

414-02 : Generator and Regulator

Specifications

[Specifications](#)

Description and Operation

[Generator](#)

Diagnosis and Testing

[Generator](#)

Removal and Installation

[Generator - 3.0L NA V6 - AJ27](#) (86.10.02)

[Generator - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8](#)
(86.10.02)

[Generator - 2.7L V6 - TdV6](#) (86.10.02)

415 : Information and Entertainment Systems

415-00 : Information and Entertainment System - General Information

General Procedures

Cassette Player Cleaning

Diagnosis and Testing

[Audio System](#)

415-01 : Audio Unit

Specifications

[Specifications](#)

Description and Operation

[Audio System](#)

[Audio System - VIN Range: H18680->H99999](#)

[Audio System](#)

Diagnosis and Testing

[Audio System](#)

Removal and Installation

[Amplifier \(86.50.10\)](#)

[Audio Unit \(86.50.03\)](#)

[Compact Disc \(CD\) Changer \(86.50.06\)](#)

[Steering Wheel Audio Controls \(86.50.42\)](#)

415-02 : Antenna

Description and Operation

[Antenna](#)

Diagnosis and Testing

[Antenna](#)

Removal and Installation

[Antenna Isolator Module \(86.51.08\)](#)

415-03 : Speakers

Description and Operation

[Speakers](#)

[Speakers](#)

Diagnosis and Testing

[Speakers](#)

Removal and Installation

[Front Door Speaker \(86.50.13\)](#)

[Front Door Tweeter Speaker \(86.50.63\)](#)

[Instrument Panel Speaker](#)

[Rear Door Speaker \(86.50.14\)](#)

[Rear Door Tweeter Speaker \(86.50.62\)](#)

[Subwoofer Speaker \(86.51.05\)](#)

415-07 : Video System

Specifications

[Specifications](#)

Description and Operation

[Video System](#)

Diagnosis and Testing

[Video System](#)

Removal and Installation

[Digital Versatile Disc \(DVD\) Player](#)

[Rear Passenger Entertainment Control Panel](#)

[Video Display](#)

[Video System Module](#)

417 : Lighting

417-01 : Exterior Lighting

Specifications

[Specifications](#)

General Procedures

[Headlamp Adjustment](#) (86.40.18)

Description and Operation

[Exterior Lighting](#)

[Exterior Lighting - VIN Range: H18680->H99999](#)

Diagnosis and Testing

[Headlamps](#)

Removal and Installation

[Approach Lamp - VIN Range: G00442->H18679](#)

[Approach Lamp - VIN Range: H18680->H99999](#)

[Ballast - Vehicles With: High Intensity Discharge Headlamps](#) (86.41.52)

[Front Fog Lamp - VIN Range: G00442->H18679](#) (86.40.96)

[Fog Lamp - VIN Range: H18680->H99999](#)

[Headlamp Assembly](#) (86.41.33)

[Headlamp Bulb - Vehicles With: High Intensity Discharge Headlamps](#)
(86.42.14)

[Headlamp Leveling Motor](#) (86.42.04)

[Headlamp Leveling Sensor](#) (86.42.15)

[High Mounted Stoplamp](#) (86.41.01)

[Stoplamp Switch](#)

[Rear Lamp Assembly](#) (86.40.70)

417-02 : Interior Lighting

Description and Operation

[Interior Lighting](#)

Diagnosis and Testing

[Interior Lighting](#)

417-04 : Daytime Running Lamps (DRL)

Description and Operation

[Daytime Running Lamps \(DRL\)](#)

Diagnosis and Testing

[Daytime Running Lamps \(DRL\)](#)

418 : Electrical Distribution

418-00 : Module Communications Network

Description and Operation

[Communications Network](#)

Diagnosis and Testing

[Communications Network](#)

418-01 : Module Configuration

Diagnosis and Testing

[Module Configuration](#)

419 : Electronic Feature Group

419-01A : Anti-Theft - Active

Description and Operation

[Anti-Theft - Active](#)

Diagnosis and Testing

[Anti-Theft - Active](#)

Removal and Installation

[Anti-Theft Alarm Horn \(86.52.03\)](#)

419-01B : Anti-Theft - Passive

General Procedures

[Anti-Theft Security Access](#)

[Key Programming Using Diagnostic Equipment](#)

[Key Programming Using Two Programmed Keys](#)

Description and Operation

[Anti-Theft - Passive](#)

Diagnosis and Testing

[Anti-Theft - Passive](#)

Removal and Installation

[Passive Anti-Theft System \(PATS\) Transceiver \(86.52.30\)](#)

419-02 : Remote Convenience

General Procedures

[Universal Transmitter Programming](#)

Description and Operation

[Universal Transmitter](#)

Diagnosis and Testing

[Universal Transmitter](#)

419-07 : Navigation System

Description and Operation

[Navigation System](#)

Diagnosis and Testing

[Navigation System](#)

Removal and Installation

[Navigation System Antenna - VIN Range: G00442->H18679 \(86.62.06\)](#)

[Navigation System Antenna - VIN Range: H18680->H99999 \(86.62.06\)](#)

[Navigation System Display Module \(86.62.07\)](#)

[Navigation System Module \(86.62.05\)](#)

419-08 : Cellular Phone

Description and Operation

[Cellular Phone - VIN Range: G00442->G45703](#)

[Cellular Phone - VIN Range: G45704->H18679](#)

[Cellular Phone - VIN Range: H18680->H99999](#)

[Diagnosis and Testing](#)

[Cellular Phone](#)

[Cellular Phone - Vehicles With: Bluetooth](#)

[Removal and Installation](#)

[Bluetooth Module](#)

[Cellular Phone Antenna - Vehicles With: Corded Cellular Phone, VIN](#)

[Range: G00442->H18679 \(86.51.17\)](#)

[Cellular Phone Antenna - Vehicles With: Cordless Cellular Phone, VIN](#)

[Range: G00442->H18679 \(86.51.17\)](#)

[Cellular Phone Antenna - VIN Range: H18680->H99999 \(86.51.17\)](#)

[Front Handset Holder](#)

[Transceiver Module](#)

419-10 : Multifunction Electronic Modules

[Specifications](#)

[Specifications](#)

[Description and Operation](#)

[Module Controlled Functions](#)

[Diagnosis and Testing](#)

[Multifunction Electronic Module](#)

[Removal and Installation](#)

[Driver Door Module \(DDM\) \(86.80.29\)](#)

[Driver Seat Module \(DSM\) \(86.75.28\)](#)

[Front Electronic Module \(FEM\) \(86.80.41\)](#)

[Multifunction Voice Activated Module \(86.53.13\)](#)

[Rear Electronic Module \(REM\) \(86.80.37\)](#)

[Rear Seat Module \(RSM\) \(86.75.40\)](#)

5 : Body and Paint

501 : Body and Paint

501-02 : Front End Body Panels

Description and Operation

[Front End Body Panels](#)

Removal and Installation

[Air Deflector \(76.11.41\)](#)

[Cowl Vent Screen \(76.10.01\)](#)

[Fender Splash Shield \(76.10.90\)](#)

[Radiator Grille Opening Panel \(76.10.06\)](#)

[Radiator Splash Shield \(76.22.90\)](#)

[Secondary Bulkhead Center Panel](#)

501-03 : Body Closures

Specifications

[Specifications](#)

General Procedures

[Hood Alignment \(76.16.02\)](#)

[Luggage Compartment Lid Alignment \(76.19.03\)](#)

[Rear Door Alignment \(76.28.08\)](#)

Description and Operation

[Body Closures](#)

Removal and Installation

[Front Door Opening Weatherstrip \(76.40.01\)](#)

[Hood \(76.16.01\)](#)

501-05 : Interior Trim and Ornamentation

Specifications

[Specifications](#)

Description and Operation

[Interior Trim](#)

Removal and Installation

[A-Pillar Trim Panel \(76.13.31\)](#)

[B-Pillar Lower Trim Panel \(76.13.29\)](#)

[B-Pillar Upper Trim Panel \(76.13.28\)](#)

[Cowl Side Trim Panel \(76.13.30\)](#)

[C-Pillar Lower Trim Panel](#)

[C-Pillar Upper Trim Panel](#)

[Folding Tray \(76.47.31\)](#)

[Front Door Trim Panel \(76.34.01\)](#)

[Headliner \(76.64.01\)](#)

[Parcel Shelf \(76.67.06\)](#)

[Rear Door Quarter Window Blind](#)

[Rear Door Trim Panel \(76.34.04\)](#)

[Rear Door Window Blind](#)

[Rear Window Blind \(76.14.04\)](#)

Rear Window Blind Arm
Rear Window Blind Motor
Scuff Plate Trim Panel (76.13.81)
Sun Visor (76.10.48)

501-08 : Exterior Trim and Ornamentation

Description and Operation

Exterior Trim

Removal and Installation

Door Moulding (76.43.72)

Luggage Compartment Lid Moulding - VIN Range: G00442->H18679
(76.43.79)

Luggage Compartment Lid Moulding - VIN Range: H18680->H99999
(76.43.79)

Radiator Grille (76.55.03)

Rocker Panel Moulding (76.11.36)

Window Moulding (76.43.20)

501-09 : Rear View Mirrors

Specifications

Specifications

Description and Operation

Rear View Mirrors

Rear View Mirrors - VIN Range: H18680->H99999

Diagnosis and Testing

Rear View Mirrors

Removal and Installation

Auto-Dimming Interior Mirror (76.10.56)

Exterior Mirror (76.10.52)

Exterior Mirror Cover (76.10.55)

Exterior Mirror Glass (76.10.53)

Exterior Mirror Motor - VIN Range: G00442->H18679 (76.10.57)

Exterior Mirror Motor - VIN Range: H18680->H99999 (76.10.57)

501-10 : Seating

Specifications

Specifications

Description and Operation

Seats - VIN Range: G00442->H18679

Seats - VIN Range: H18680->H99999

Diagnosis and Testing

Seats - VIN Range: G00442->H18679

Seats - VIN Range: H18680->H99999

Removal and Installation

Front Seat (76.70.01)

Front Seat Backrest - VIN Range: G00442->H18679 (76.70.06)

Front Seat Backrest - VIN Range: H18680->H99999 (76.70.06)

Front Seat Backrest Cover - VIN Range: G00442->H18679 (76.70.15)
Front Seat Backrest Cover - VIN Range: H18680->H99999 (76.70.15)
Front Seat Backrest Heater and Blower Assembly
Front Seat Backrest Rear Cover - VIN Range: G00442->H18679 (76.70.03)
Front Seat Backrest Rear Cover - VIN Range: H18680->H99999 (76.70.03)
Front Seat Control Switch (86.75.46)
Front Seat Cushion Cover - VIN Range: G00442->H18679 (76.70.33)
Front Seat Cushion Cover - VIN Range: H18680->H99999 (76.70.33)
Front Seat Cushion Heater and Blower Assembly
Front Seat Head Restraint - Vehicles With: Head Restraint Video Display,
VIN Range: G00442->H18679 (76.70.14)
Front Seat Head Restraint - Vehicles With: Head Restraint Video Display,
VIN Range: H18680->H99999 (76.70.14)
Front Seat Head Restraint Motor - VIN Range: G00442->H18679
(86.75.17)
Front Seat Head Restraint Motor - VIN Range: H18680->H99999
(86.75.17)
Front Seat Height Adjustment Motor (86.75.29)
Front Seat Lumbar Motor (86.75.44)
Front Seat Rear Height Adjustment Motor (86.75.32)
Front Seat Recliner Motor - VIN Range: G00442->H18679 (86.75.04)
Front Seat Recliner Motor - VIN Range: H18680->H99999 (86.75.04)
Front Seat Track Motor (86.75.33)
Lumbar Assembly (86.75.12)
Memory Seat Position Switch
Rear Outer Seat Backrest (76.70.76)
Rear Outer Seat Backrest Cover (76.70.51)
Rear Outer Seat Cushion (76.70.44)
Rear Seat Armrest (76.70.39)
Rear Seat Backrest (76.70.38)
Rear Seat Backrest Cover (76.70.48)
Rear Seat Control Switch (86.75.42)
Rear Seat Cushion (76.70.37)
Rear Seat Cushion Cover (76.70.47)
Rear Seat Head Restraint Motor (86.75.41)
Rear Seat Lumbar Motor (86.75.43)
Seat Armrest (76.70.97)
Seat Base (76.70.08)
Assembly & Disassembly
Rear Seat Backrest - Vehicles With: 40/20/40 Split Seat (76.70.48)

501-11 : Glass, Frames and Mechanisms

Specifications

Specifications

General Procedures

Door Window Motor Initialization

Description and Operation

Glass, Frames and Mechanisms

Diagnosis and Testing

Glass, Frames and Mechanisms

Removal and Installation

Front Door Window Glass (76.31.01)

Front Door Window Regulator and Motor (86.25.04)

Rear Door Fixed Window Glass

Rear Door Window Glass (76.31.02)

Rear Door Window Regulator and Motor (86.25.09)

Rear Window Glass (76.81.11)

Window Control Switch (86.25.08)

Windshield Glass (76.81.40)

501-12 : Instrument Panel and Console

Specifications

Specifications

Description and Operation

Instrument Panel

Removal and Installation

Floor Console - Vehicles With: Auxiliary Climate Control (76.25.01)

Floor Console - Vehicles Without: Auxiliary Climate Control (76.25.01)

Glove Compartment (76.52.03)

Instrument Panel (76.46.01)

Instrument Panel Console (88.20.34)

Overhead Console (76.13.69)

501-14 : Handles, Locks, Latches and Entry Systems

Specifications

Specifications

General Procedures

Remote Transmitter Programming

Description and Operation

Handles, Locks, Latches and Entry Systems

Diagnosis and Testing

Locks, Latches and Entry Systems

Removal and Installation

Exterior Door Handle (76.58.07)

Front Door Lock Actuator (76.37.74)

Front Door Lock Cylinder (76.37.71)

Interior Door Handle (76.37.31)

Luggage Compartment Lid Latch Actuator - VIN Range: G00442->H18679
(76.19.25)

Luggage Compartment Lid Latch Actuator - VIN Range: H18680->H99999
(76.19.25)

Luggage Compartment Lid Lock Cylinder - VIN Range: G00442->H18679
(76.19.19)

Luggage Compartment Lid Lock Cylinder - VIN Range: H18680->H99999
(76.19.19)

Rear Door Lock Actuator (76.37.09)

501-16 : Wipers and Washers

Specifications

Specifications

Specifications

Description and Operation

Wipers and Washers - VIN Range: G00442->G45703

Wipers and Washers - VIN Range: G45704->G99999

Diagnosis and Testing

Wipers and Washers

Removal and Installation

Headlamp Washer Jet (84.20.08)

Headlamp Washer Pump - VIN Range: G00442->G45703 (84.20.21)

Headlamp Washer Pump - VIN Range: G45704->G99999 (84.20.21)

Rain Sensor (84.12.10)

Windshield Washer Pump - VIN Range: G00442->G45703 (84.10.21)

Windshield Washer Pump - VIN Range: G45704->G99999 (84.10.21)

Windshield Washer Reservoir - VIN Range: G00442->G45703 (84.10.01)

Windshield Washer Reservoir - VIN Range: G45704->G99999 (84.10.01)

Windshield Wiper Motor (84.15.13)

Wiper Mounting Arm and Pivot Shaft (84.15.24)

Wiper Pivot Arm (84.15.03)

501-17 : Roof Opening Panel

Specifications

Specifications

General Procedures

Motor Synchronization (76.82.48)

Roof Opening Panel Alignment

Description and Operation

Roof Opening Panel

Diagnosis and Testing

Roof Opening Panel

Removal and Installation

Air Deflector (76.82.07)

Roof Opening Panel Frame (76.82.01)

Roof Opening Panel Front Drain Hose (76.82.21)

Roof Opening Panel Glass (76.82.05)

Roof Opening Panel Motor (86.76.01)

Roof Opening Panel Weatherstrip (76.82.15)

Trough Assembly (76.82.58)

501-19 : Bumpers

Specifications

[Specifications](#)

Description and Operation

[Bumpers](#)

Removal and Installation

[Front Bumper](#) (76.22.08)

[Front Bumper Cover - VIN Range: G00442->H18679](#) (76.22.78)

[Front Bumper Cover - VIN Range: H18680->H99999](#) (76.22.78)

[Front Bumper Cover Insert](#) (76.22.73)

[Rear Bumper](#) (76.22.27)

[Rear Bumper Cover - VIN Range: G00442->H18679](#) (76.22.74)

[Rear Bumper Cover - VIN Range: H18680->H99999](#) (76.22.74)

[Rear Bumper Cover Insert](#) (76.22.75)

501-20A : Safety Belt System

Specifications

[Specifications](#)

Description and Operation

[Safety Belt System](#)

Diagnosis and Testing

[Safety Belt System](#)

Removal and Installation

[Front Safety Belt Buckle](#) (76.73.49)

[Front Safety Belt Retractor](#) (76.73.10)

[Front Safety Belt Shoulder Height Adjuster](#) (76.73.12)

[Rear Center Safety Belt Retractor](#) (76.73.20)

[Rear Safety Belt Buckle](#) (76.73.50)

[Rear Safety Belt Retractor](#) (76.73.18)

501-20B : Supplemental Restraint System

Specifications

[Specifications](#)

General Procedures

[Air Bag Disposal](#)

Description and Operation

[Air Bag Supplemental Restraint System \(SRS\)](#)

Diagnosis and Testing

[Air Bag Supplemental Restraint System \(SRS\)](#)

Removal and Installation

[B-Pillar Side Impact Sensor](#) (76.73.68)

[Clockspring](#) (86.65.92)

[C-Pillar Side Impact Sensor](#) (76.73.69)

[Crash Sensor](#) (76.73.55)

[Driver Air Bag Module](#) (76.73.39)

[Front Passenger Seat Occupant Classification Sensor](#) (76.73.60)

[Passenger Air Bag Deactivation \(PAD\) Indicator \(76.73.58\)](#)

[Passenger Air Bag Module \(76.73.37\)](#)

[Restraints Control Module \(RCM\) \(76.73.48\)](#)

[Seat Position Sensor \(76.73.62\)](#)

[Side Air Bag Module \(76.73.47\)](#)

[Side Air Curtain Module \(76.73.64\)](#)

502 : Frame and Mounting

502-00 : Uni-Body, Subframe and Mounting System

Specifications

[Specifications](#)

Description and Operation

[Frame Assembly](#)

Removal and Installation

[Front Subframe - 3.0L NA V6 - AJ27 \(76.10.05\)](#)

[Front Subframe - 4.2L NA V8 - AJV8/4.2L SC V8 - AJV8/3.5L NA V8 - AJV8 \(76.10.05\)](#)

[Front Subframe - 2.7L V6 - TdV6 \(76.10.05\)](#)

[Front Subframe Front Bushing \(60.35.51\)](#)

[Front Subframe Rear Bushing \(60.35.26\)](#)

[Rear Subframe \(64.25.01\)](#)

[Rear Subframe Front Bushing \(64.25.34\)](#)

[Rear Subframe Rear Bushing \(64.25.36\)](#)